



Motorola Xoom Wifi Back Cover Disassembly

This step-by-step replacement guide will help you take off the existing back cover and, in the process, shows you the steps for putting on a new one.

Written By: Mallika



INTRODUCTION

As this replacement guide works on an external component of the Xoom Wifi, there are no prerequisite steps.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)




PARTS:

- [Motorola Xoom Back Cover](#) (1)


This only applies if the intention is to replace the back cover. Removal alone does not warrant needing a new one.

Step 1 — Back Cover Disassembly

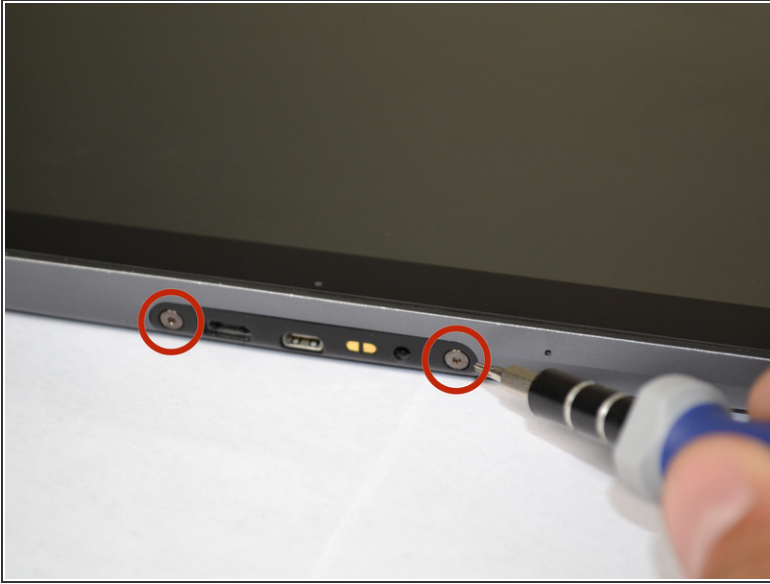



- There are two 6.6mm screws that hold ports into place as well as the back panel. Remove these with a T-5 Torx screwdriver.

Step 2

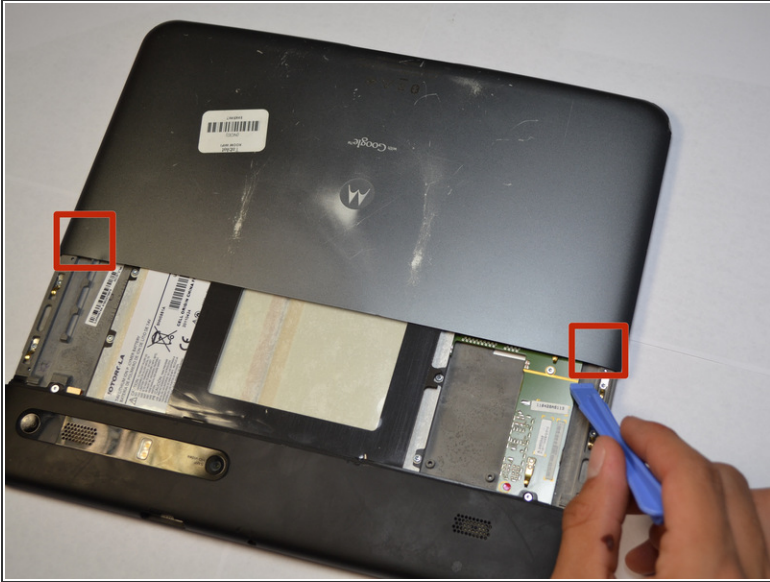

- Apply light pressure with hand and slide the back plate till it stops in this position.
- There is a flex clip on both sides that need to be pushed down in order for the plate to slide off completely. Use a plastic opening tool to release the flex clips. They are located under the back cover near the sides.
- As soon as the clips are released the back should slide off.

Step 3

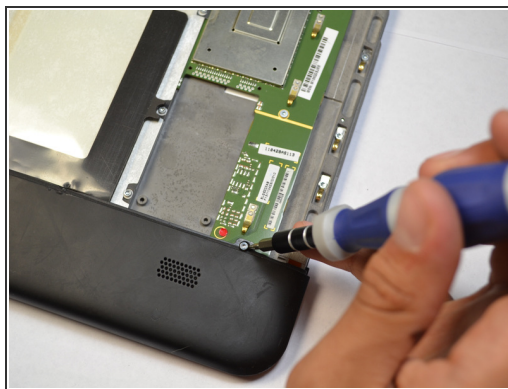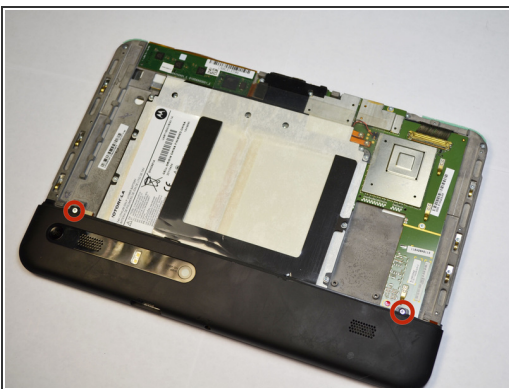

- Remove last two 4.2mm screws from the remaining back piece with a T-5 Torx screwdriver.
- Once both screws are taken out, lift the rest of the backing out of the way.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:47:16 AM.